





Mounting post
PIR AW2380

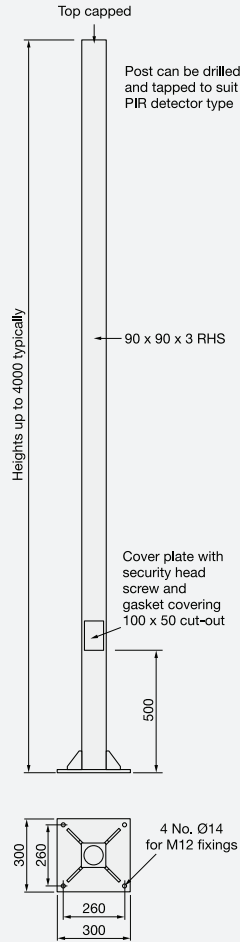

Mounting post for PIR with
compartment AW2136

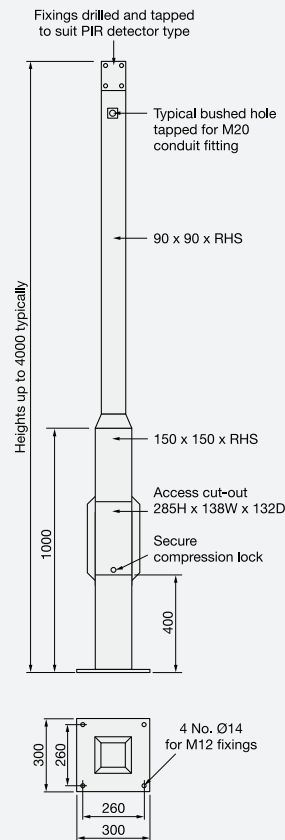

Anti ram bollards AW1771

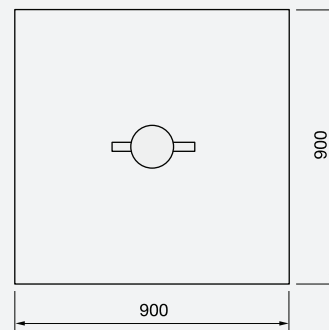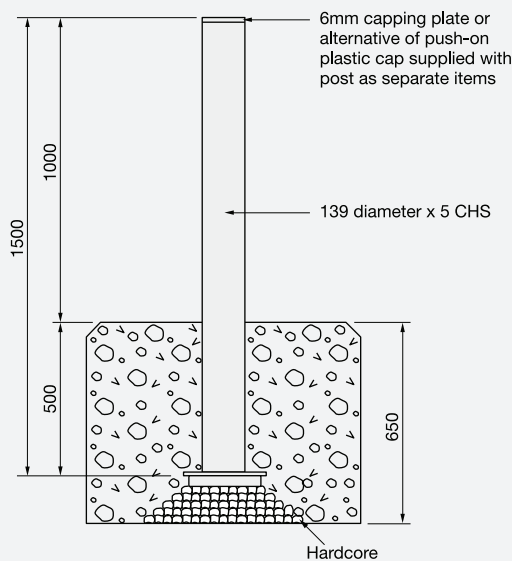

Set bollard into foundation. Fill bard with concrete - capping plate has rags on underside to push into the concrete filled bollard holding plate in position once concrete has set.